


Installation Packet

Custom access solutions from the ground up

Thank you for purchasing from Lapeyre Stair. With proper installation, your Lapeyre Stair system will give you many years of maintenance-free service.

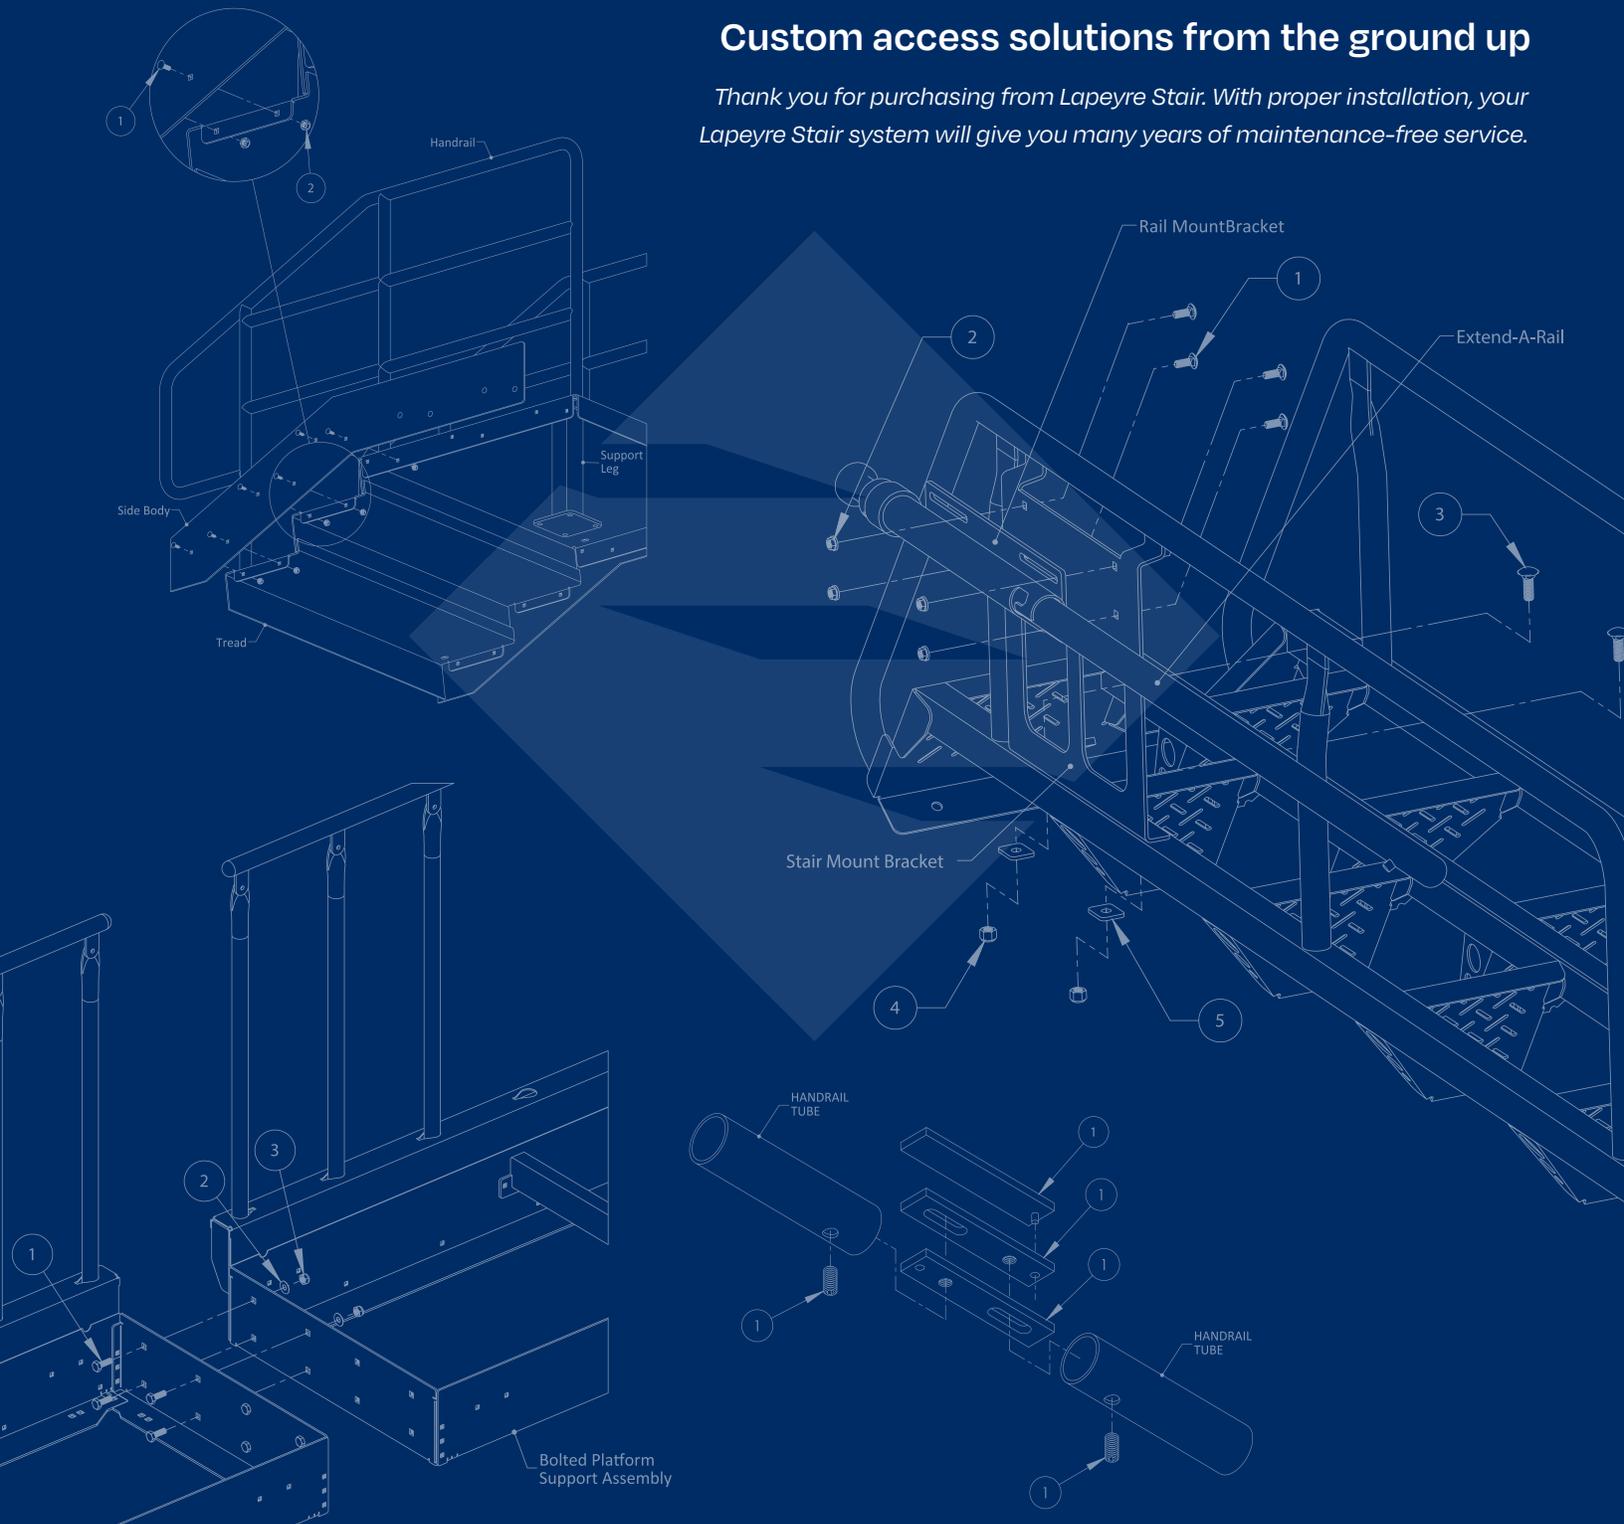

FORMED PLATFORMS

Lapeyre Stair, Inc.

P.O. Box 50699 New Orleans, LA 70150 **Email:** ls.sales@lapeyrestair.com

Phone: 504-733-6009 **Fax:** 504-733-4393 **Toll Free:** 800-535-7631

LAPEYRE STAIR

Standard Hardware Sheet

LEGEND: "\$" = "S" FOR STAINLESS OR "P" FOR PLATED HARDWARE.



KIT # 1

| | |
|--------|---------------|
| Part # | 9\$-00-000-01 |
|--------|---------------|



KIT # 2

| | |
|--------|---------------|
| Part # | 9\$-00-000-02 |
|--------|---------------|



KIT # 3

| | |
|--------|---------------|
| Part # | 9\$-00-000-03 |
|--------|---------------|



KIT # 4

| | |
|--------|---------------|
| Part # | 9\$-00-000-04 |
|--------|---------------|



KIT # 5

| | |
|--------|---------------|
| Part # | 9\$-00-000-05 |
|--------|---------------|



KIT # 7

| | |
|--------|---------------|
| Part # | 9\$-00-000-07 |
|--------|---------------|




KIT # 8

| | |
|--------|---------------|
| Part # | 9\$-00-000-08 |
|--------|---------------|




KIT # 10

| | |
|--------|---------------|
| Part # | 9\$-00-000-10 |
|--------|---------------|

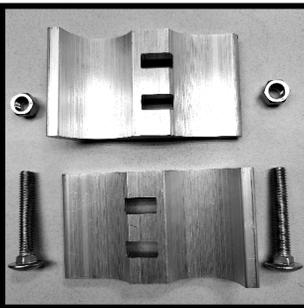


Rail Clamp Kit

| | |
|--------|-------|
| Part # | 60316 |
|--------|-------|

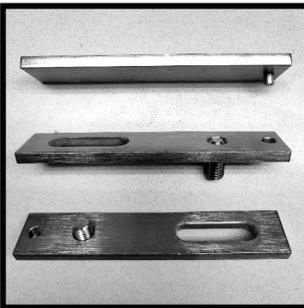


Rail Joiner Kit

| | |
|--------|--------------|
| Part # | HS-02-000-10 |
|--------|--------------|

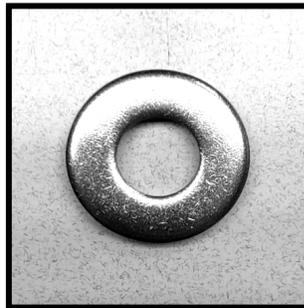

Washer

| | |
|--------|-------|
| Part # | 65059 |
|--------|-------|

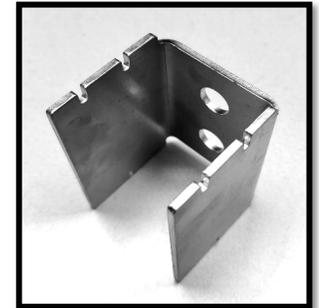


Gusset


| | |
|--------|-------------------|
| Part # | GSST1-272732-SS13 |
|--------|-------------------|

NOTE: This is a general hardware identification list. All hardware shown may not be included in your order. Please reference the CIS Assembly Instructions, Hardware BOM, or Shipping Picklist associated with your order to identify any discrepancies.


Sample Configurations

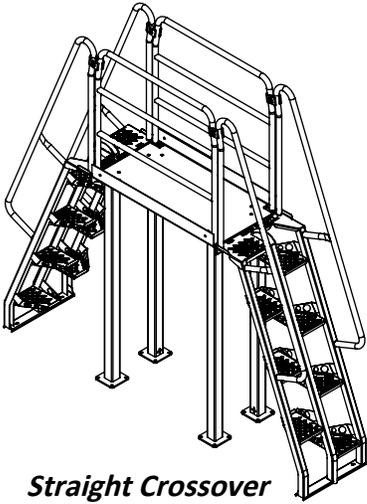


Straight Crossover

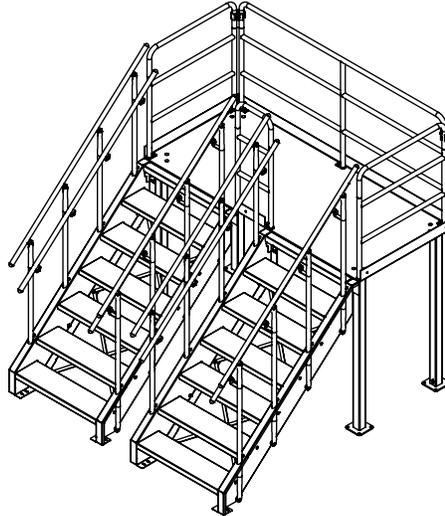


U-Type Crossover

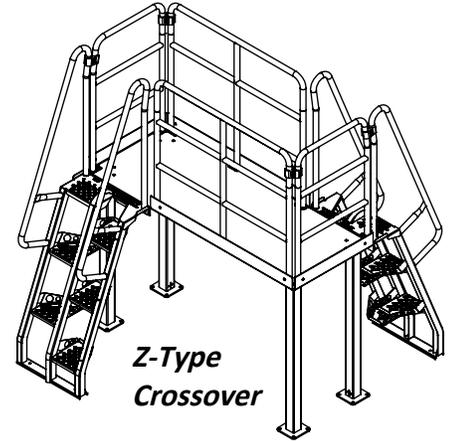


**Z-Type
Crossover**

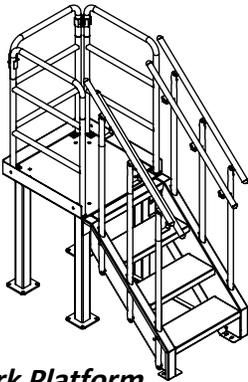


Work Platform

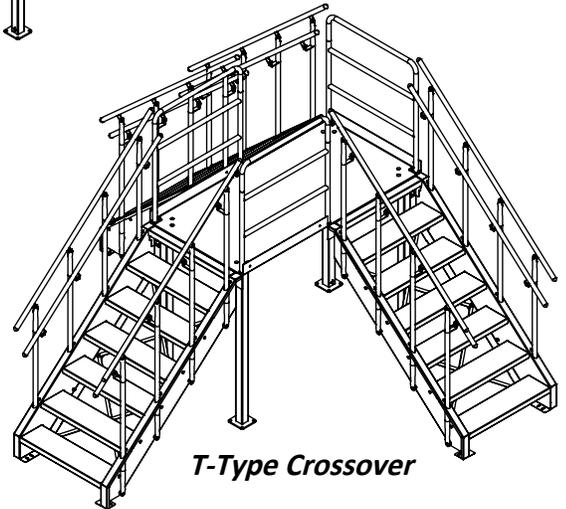


T-Type Crossover

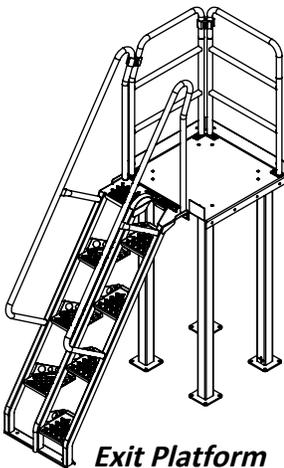

Exit Platform

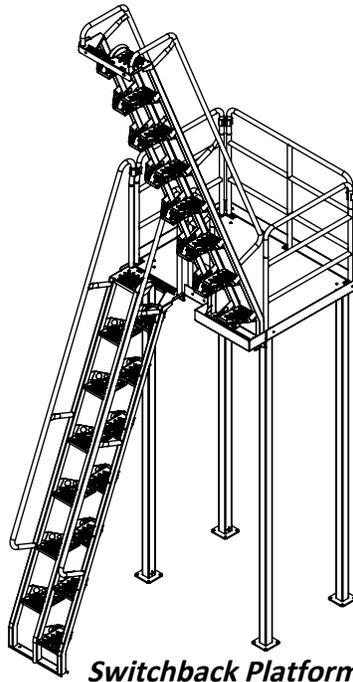


Switchback Platform

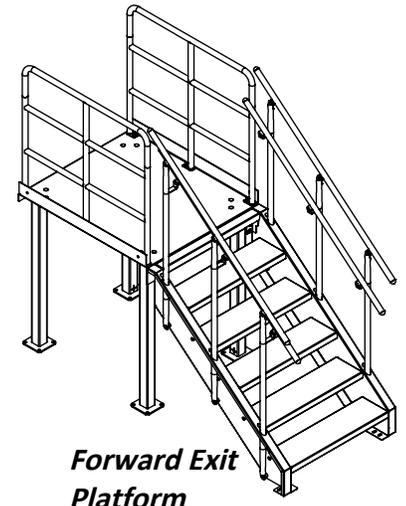

**Forward Exit
Platform**

ATS Straight Crossover shown for current example

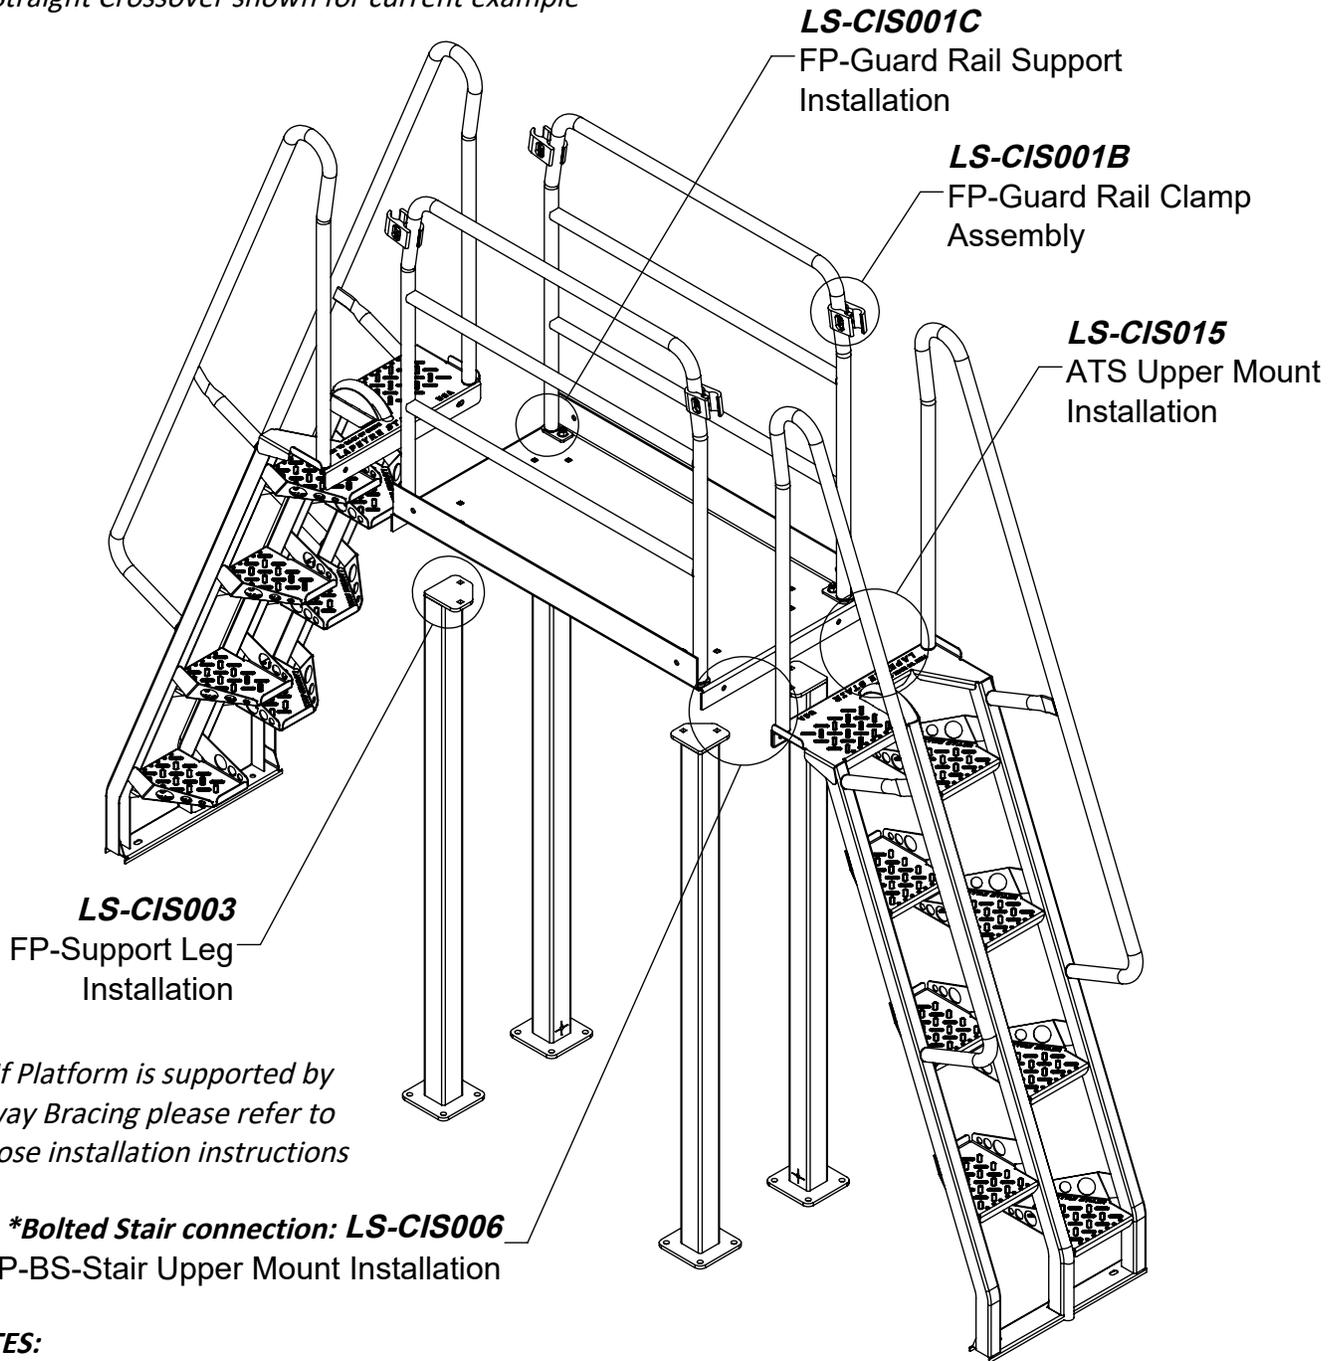

**If Platform is supported by Sway Bracing please refer to those installation instructions*

Bolted Stair connection: **LS-CIS006 FP-BS-Stair Upper Mount Installation*

NOTES:

Systems vary but connections remain the same for types: U, Z, & T-Type.
Work, Exit, or Forward Exit Platforms with no continuations remain the same connections, also.

* If Platform connects to another Platform please refer to installation sheet LS-CIS002


* If Platform is supported by Knee Brace please refer to installation sheet LS-CIS003C

* If Legs are braced please refer to installation sheet LS-CIS008B

* If Gate is ordered see instructions included with safety gate for installation

* Connections may not all be used

ATS Switchback Platform shown for current example

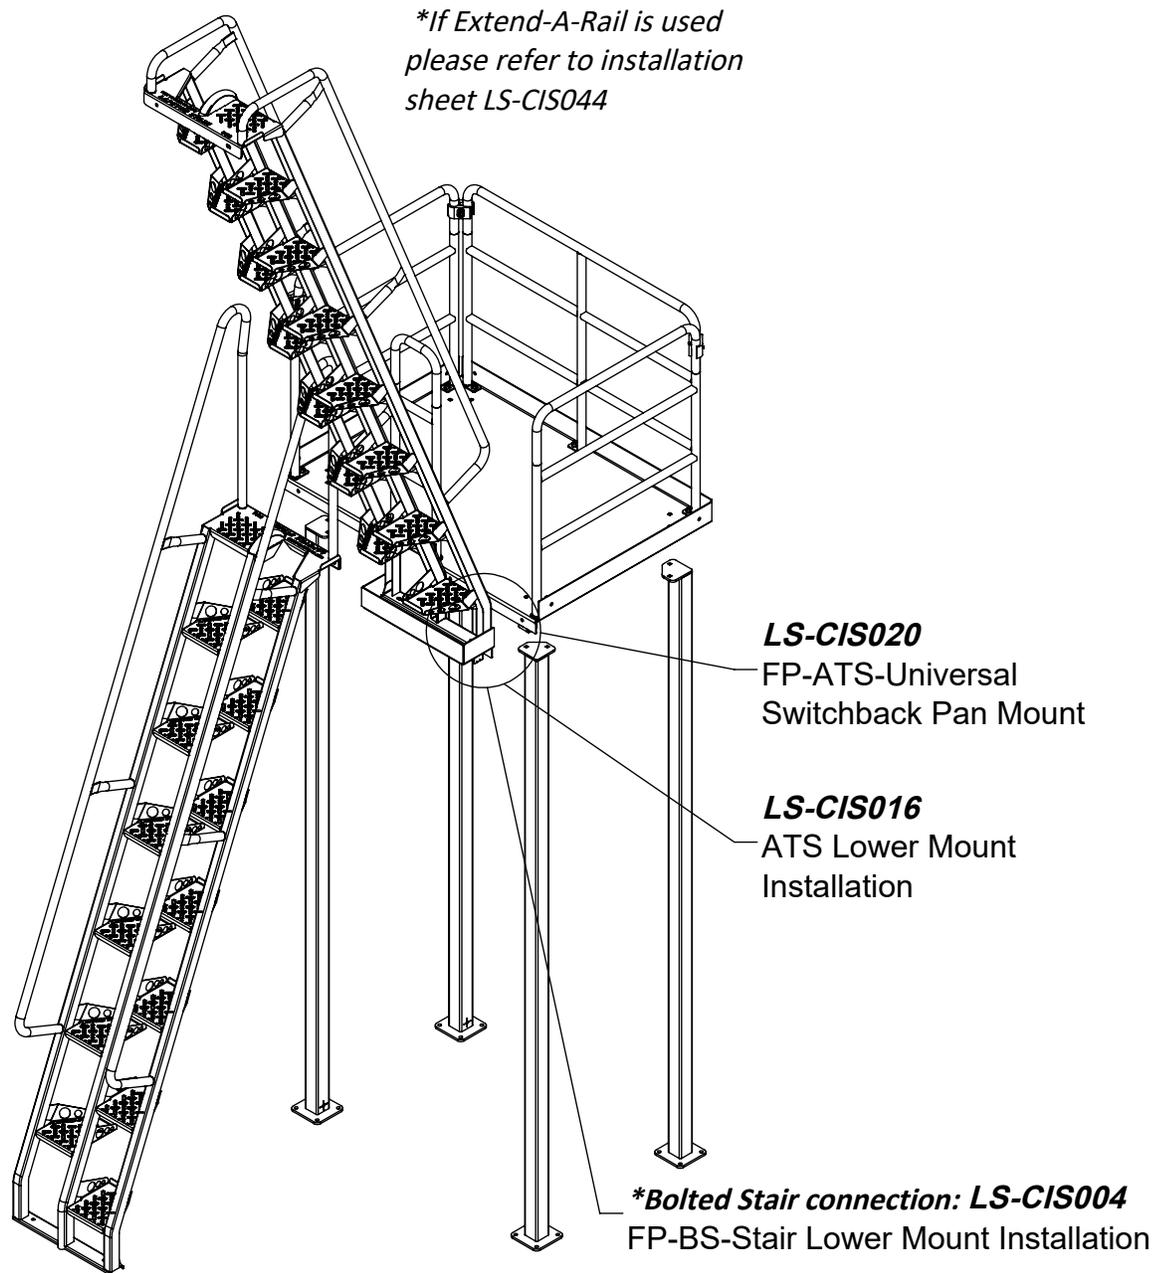


NOTES:

See previous page "**Standard Platform Composite Assembly**" for typical connections.

Forward Exit Intermediate continuation connections are the same, also.

* Connections may not all be used

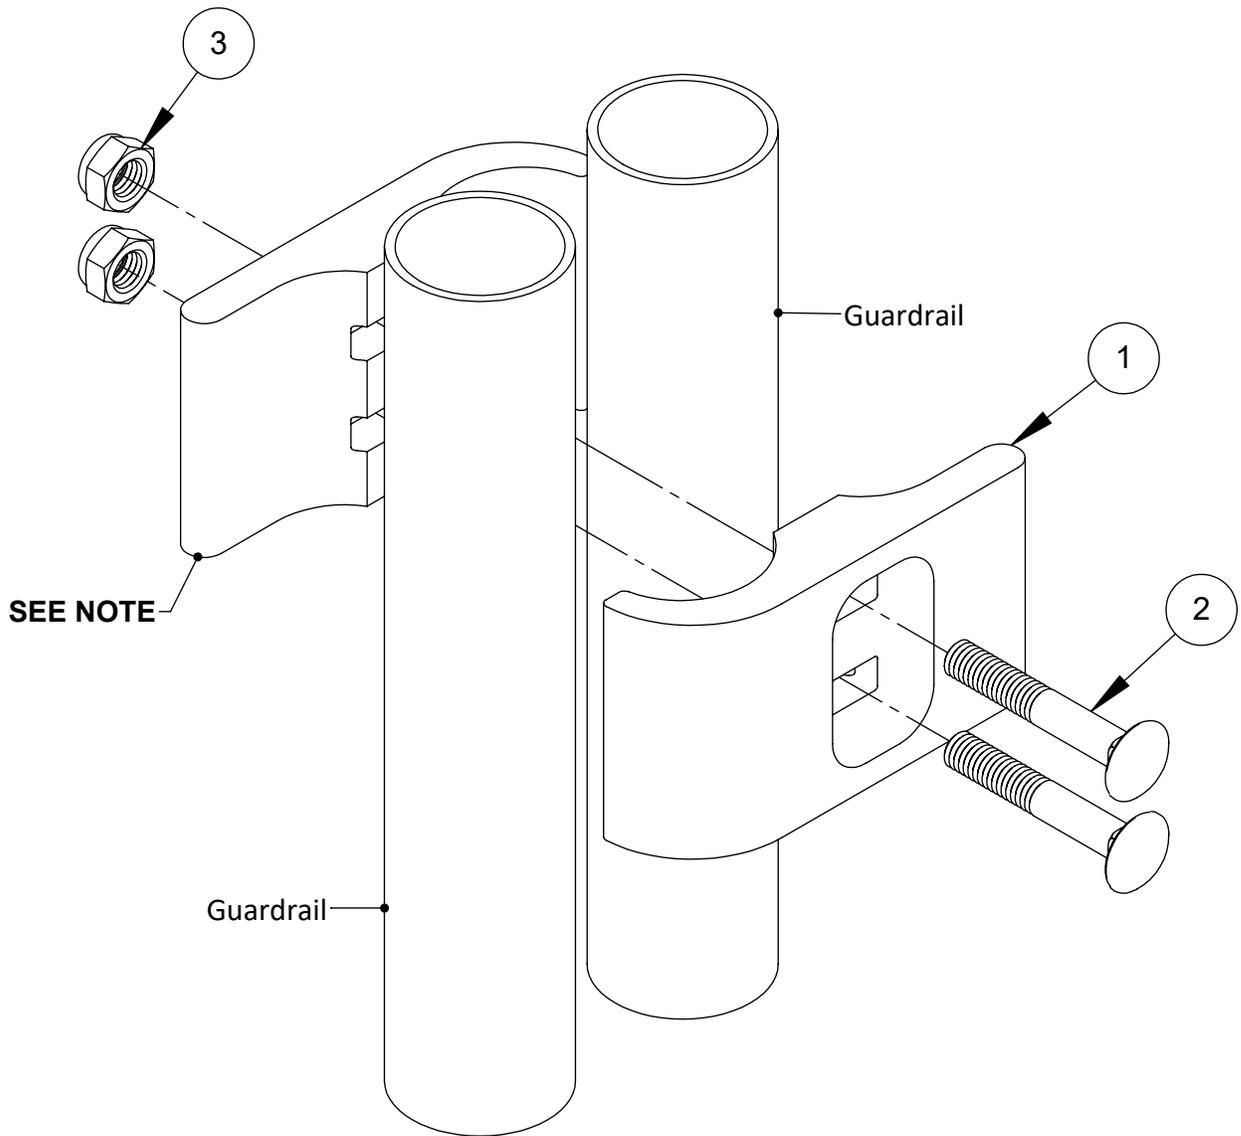

MOST FORMED PLATFORM
PARTS NOT SHOW IN VIEW
FOR CLARITY


**Quantity total is per clamp assembly*

| ITEM | QTY* | DESCRIPTION |
|------|------|-----------------------------|
| 1 | 2 | Handrail Clamp Casting |
| 2 | 2 | 5/16"-18 x 2" Carriage Bolt |
| 3 | 2 | 5/16"-18 Hex Lock Nut |

NOTE:


For vertical stability of the platform place the clamps as high as possible on the rail

REVISED 04/09/2025

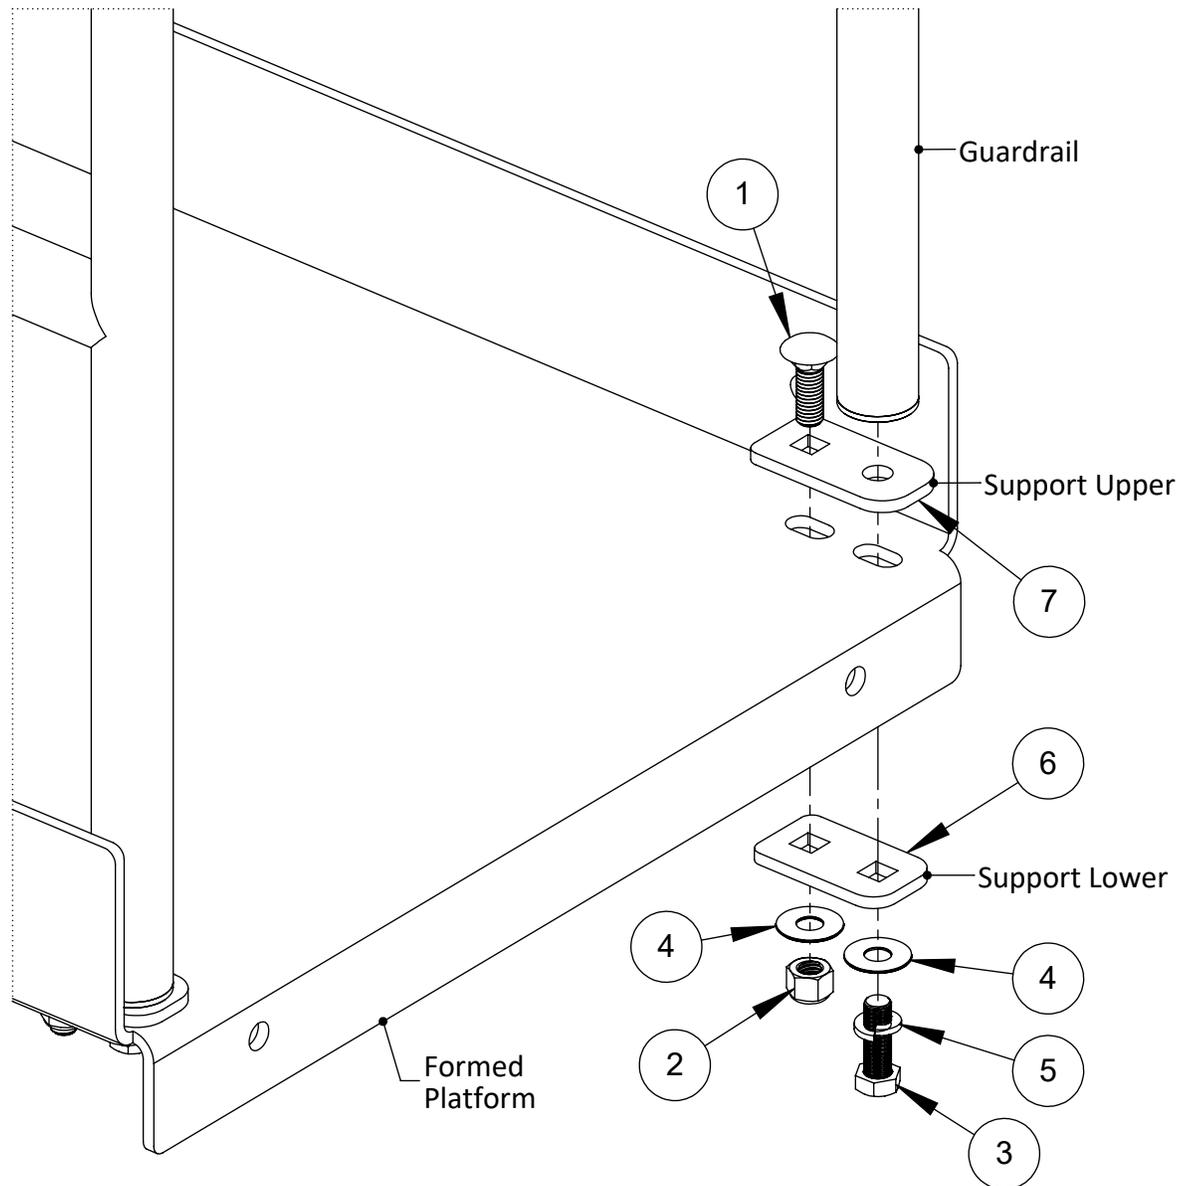


| ITEM | KIT # | DESCRIPTION |
|------|-------|---|
| 1 | 10 | 1/2"-13 X 1-1/2" Carriage Bolt |
| 2 | 10 | 1/2"-13 Lock Nut |
| 3 | 10 | 1/2"-13 X 1-1/2" Hex Nut |
| 4 | 10 | 1/2" Flat Washer |
| 5 | 10 | 1/2" Lock Washer |
| 6 | 10 | Plate, Handrail Support Lower Stainless Steel |
| 7 | 10 | Plate, Handrail Support Upper Stainless Steel |

REVISED 04/09/2025

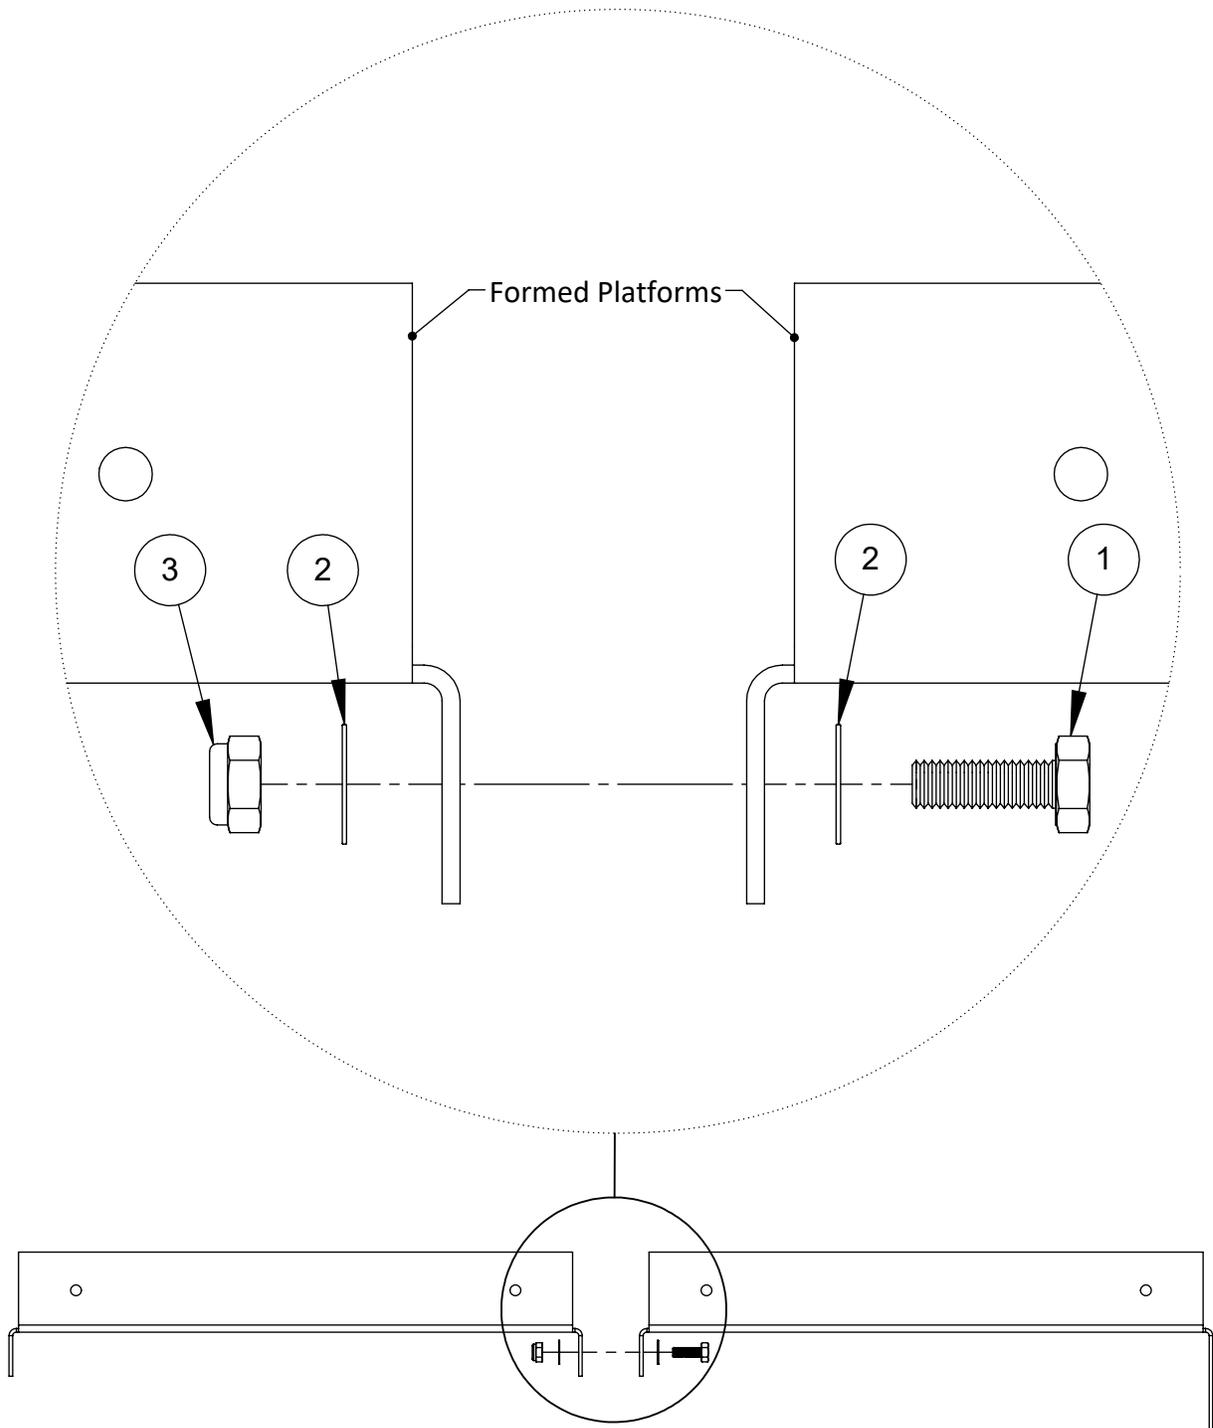


| ITEM | KIT # | DESCRIPTION |
|------|-------|---------------------------|
| 1 | 3 | 1/2"-13 X 1-1/2" Hex Bolt |
| 2 | 3 | 1/2" Flat Washer |
| 3 | 3 | 1/2"-13 Lock Nut |

REVISED 04/09/2025

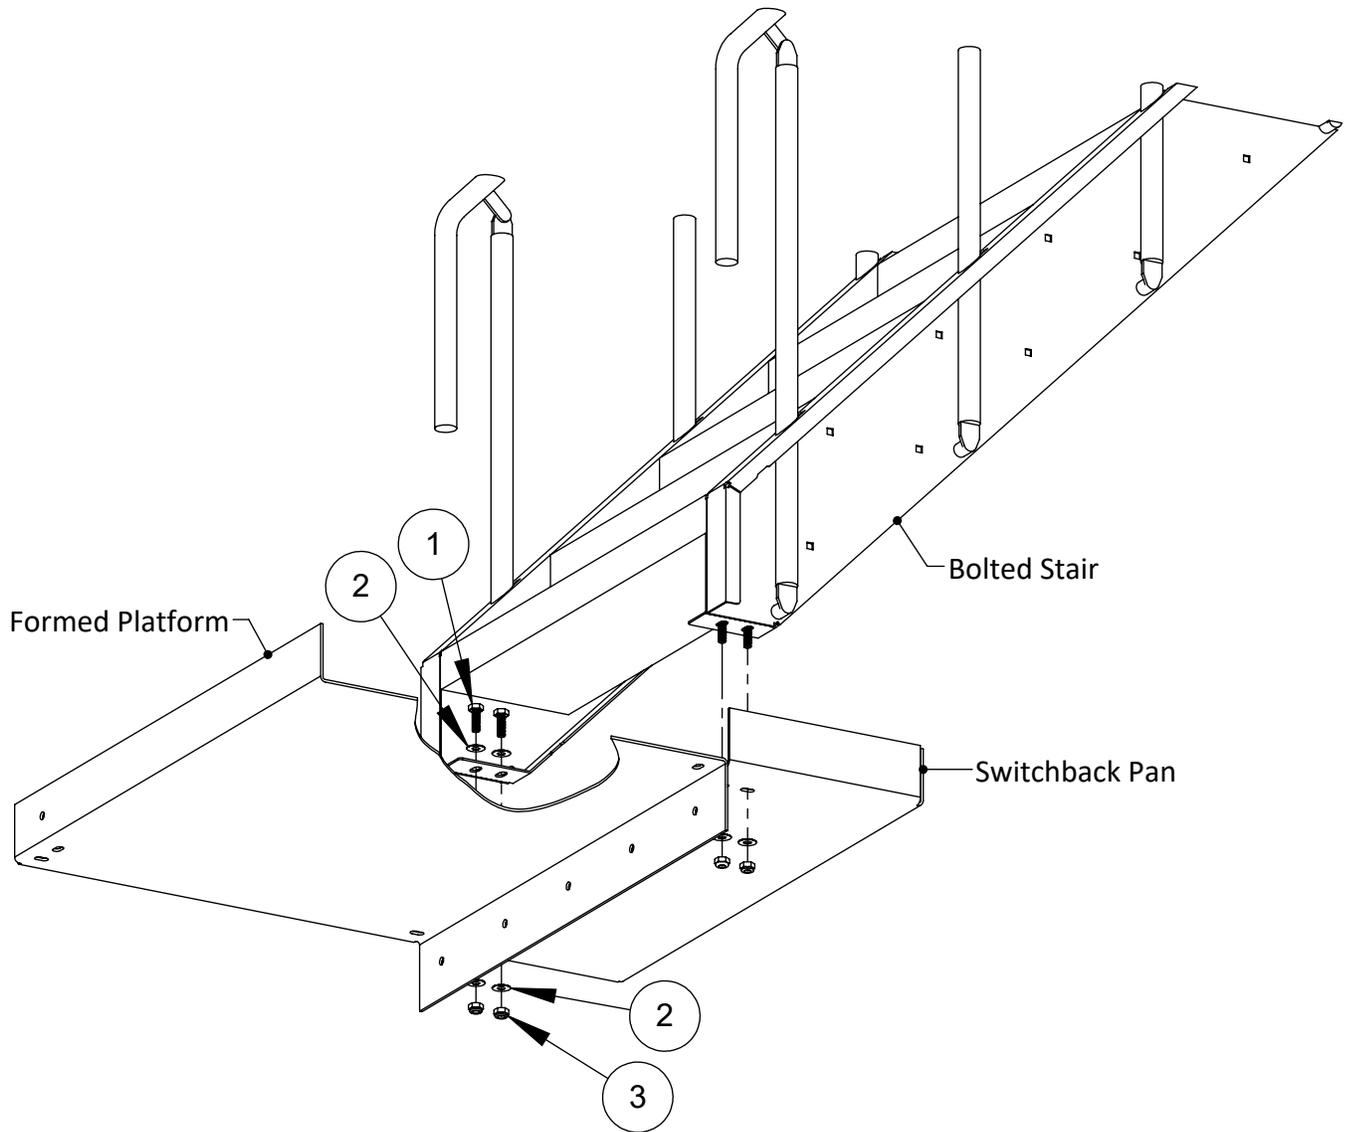


| ITEM | KIT # | DESCRIPTION |
|------|-------|---------------------------|
| 1 | 3 | 1/2"-13 X 1-1/2" Hex Bolt |
| 2 | 3 | 1/2" Flat Washer |
| 3 | 3 | 1/2"-13 Lock Nut |

REVISED 09/24/2025

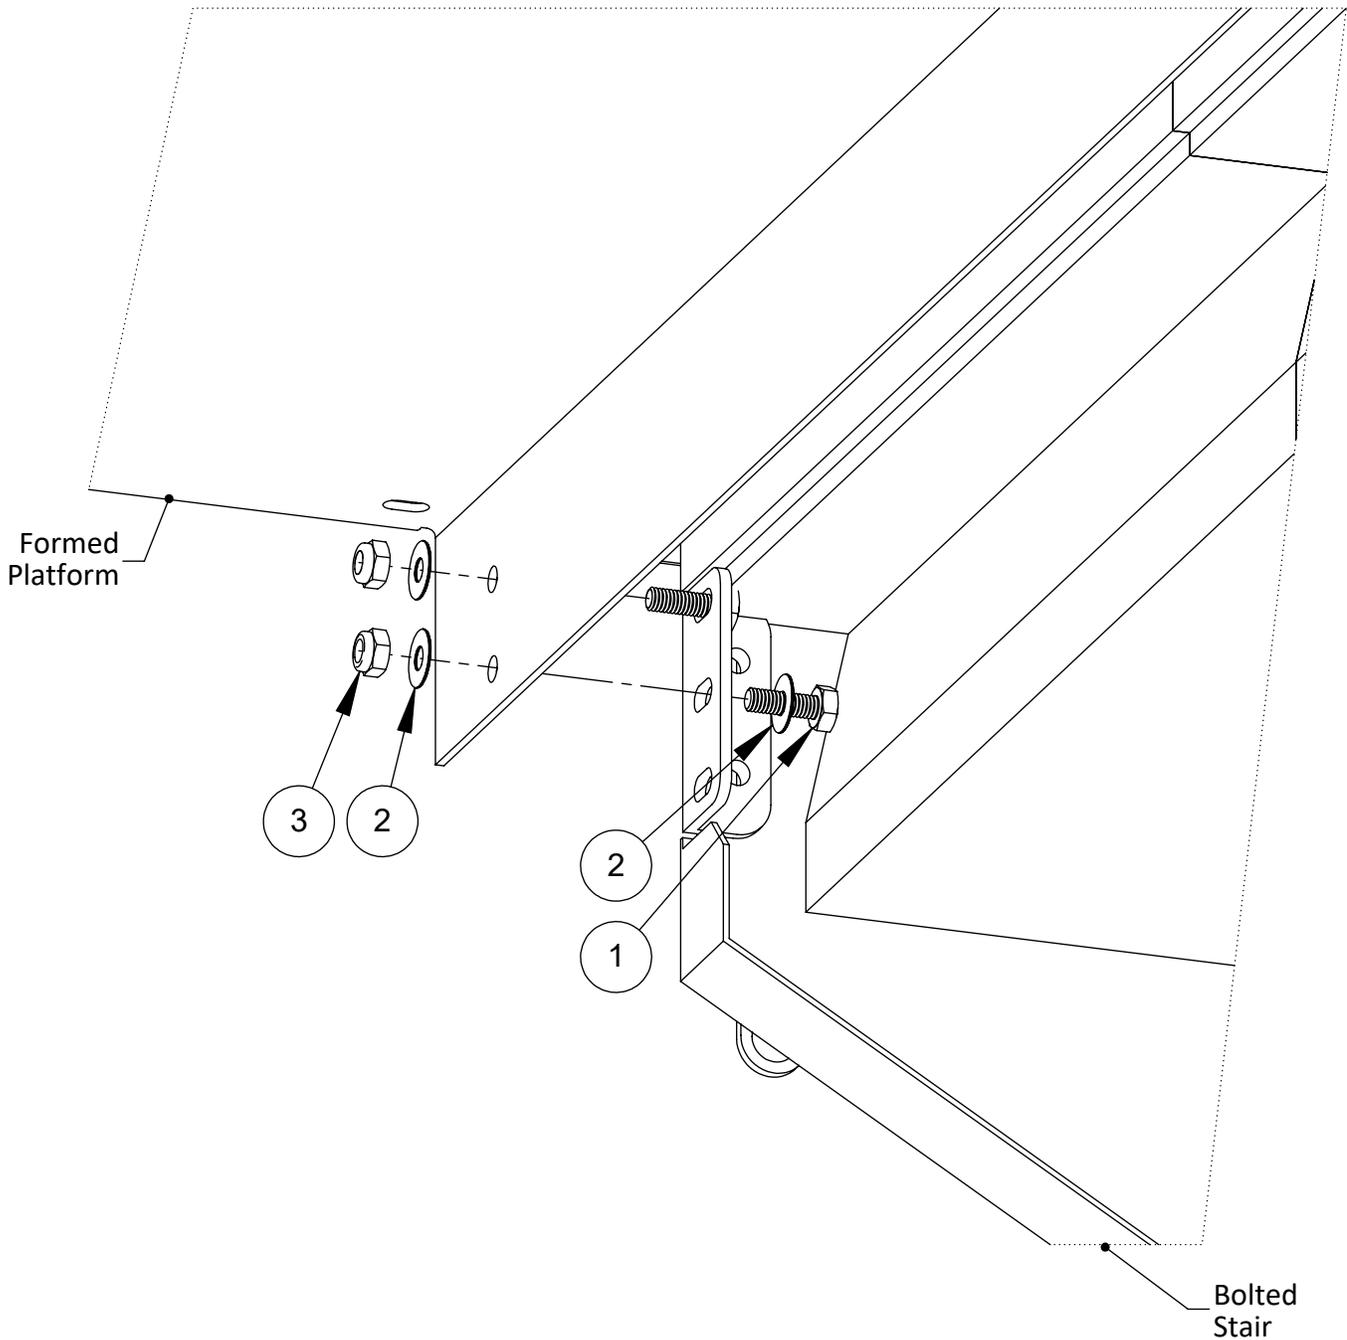


| ITEM | KIT # | DESCRIPTION |
|------|-------|---------------------------|
| 1 | 3 | 1/2"-13 X 1-1/2" Hex Bolt |
| 2 | 3 | 1/2" Flat Washer |
| 3 | 3 | 1/2"-13 Lock Nut |

REVISED 04/09/2025

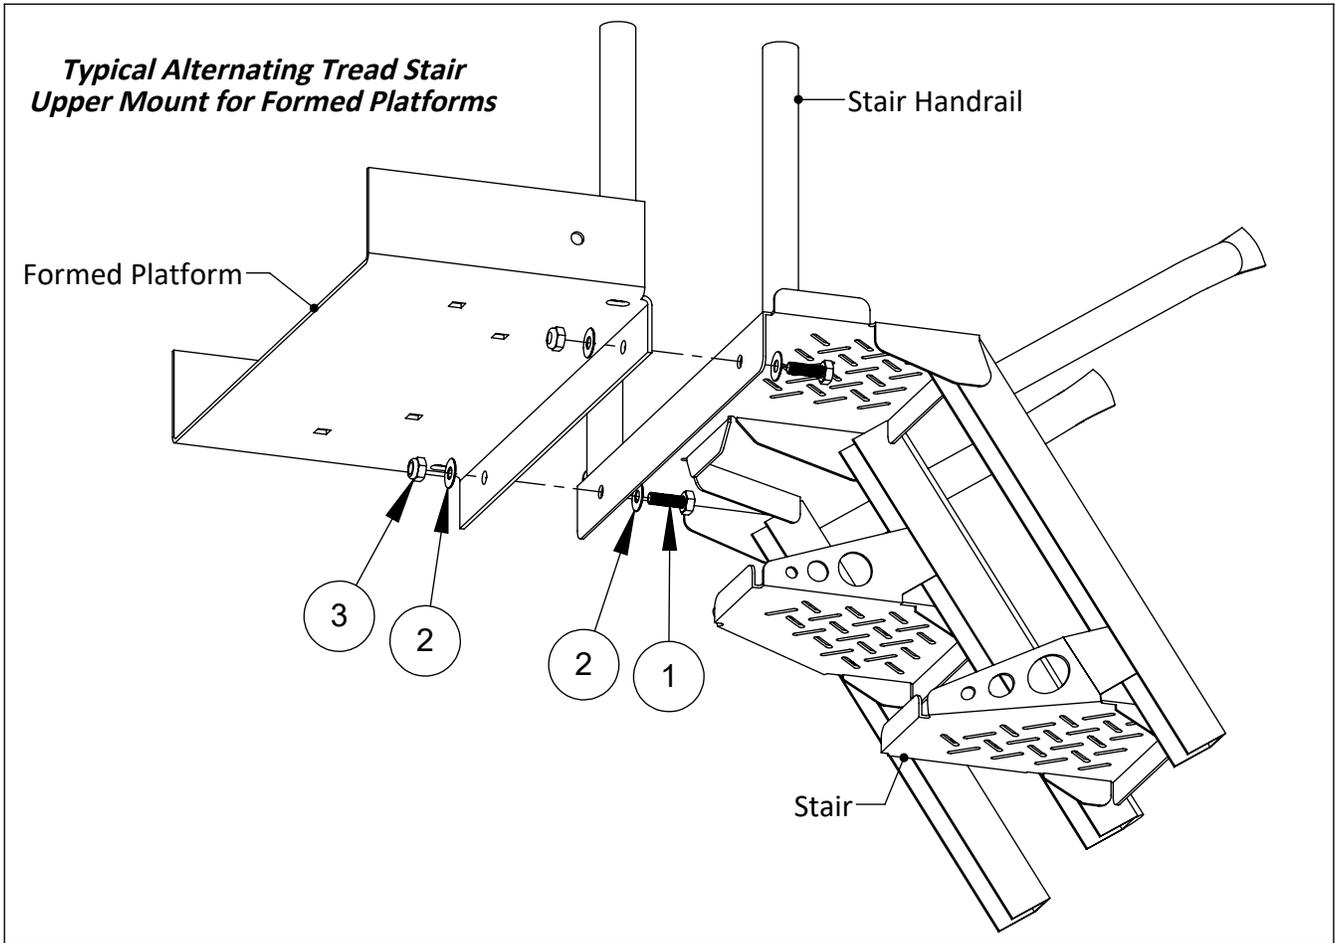


Typical Alternating Tread Stair Upper Mount for Bolted Platforms

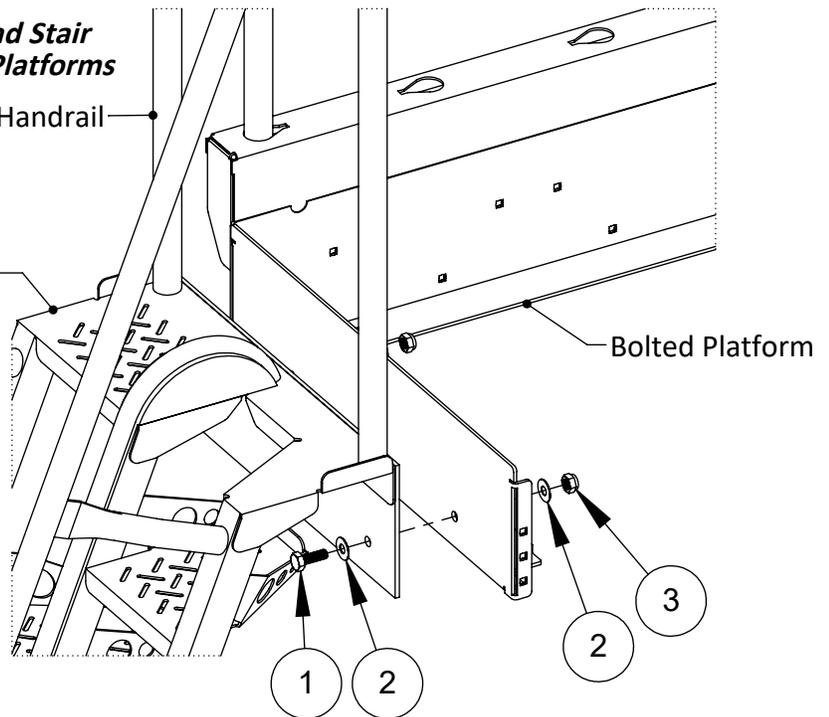


| ITEM | KIT # | DESCRIPTION |
|------|-------|---------------------------|
| 1 | 3 | 1/2"-13 X 1-1/2" Hex Bolt |
| 2 | 3 | 1/2" Flat Washer |
| 3 | 3 | 1/2"-13 Lock Nut |

REVISED 04/09/2025

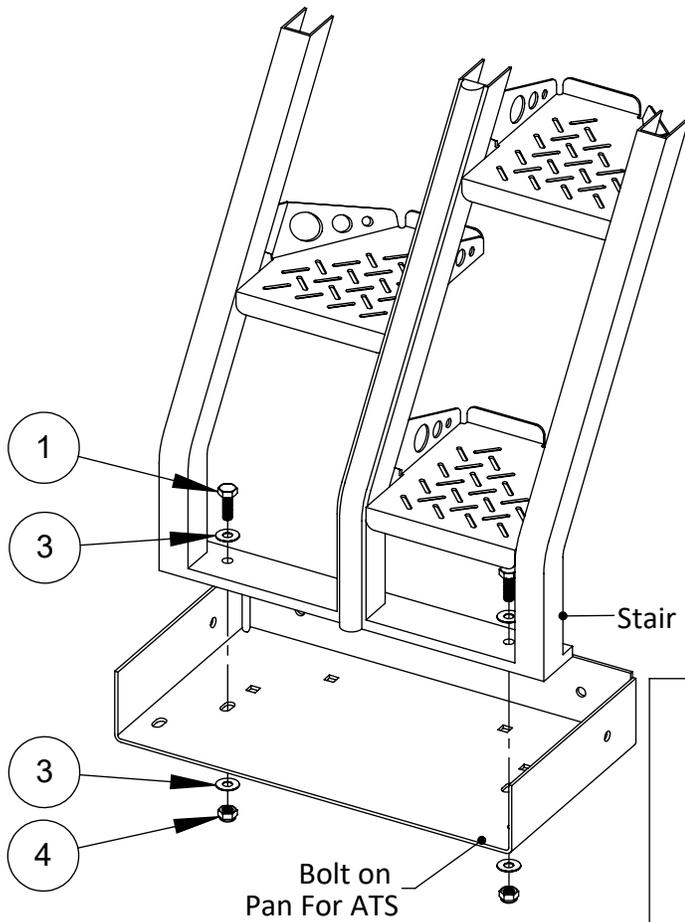


**Typical Alternating Tread Stair
Upper Mount for Formed Platforms**

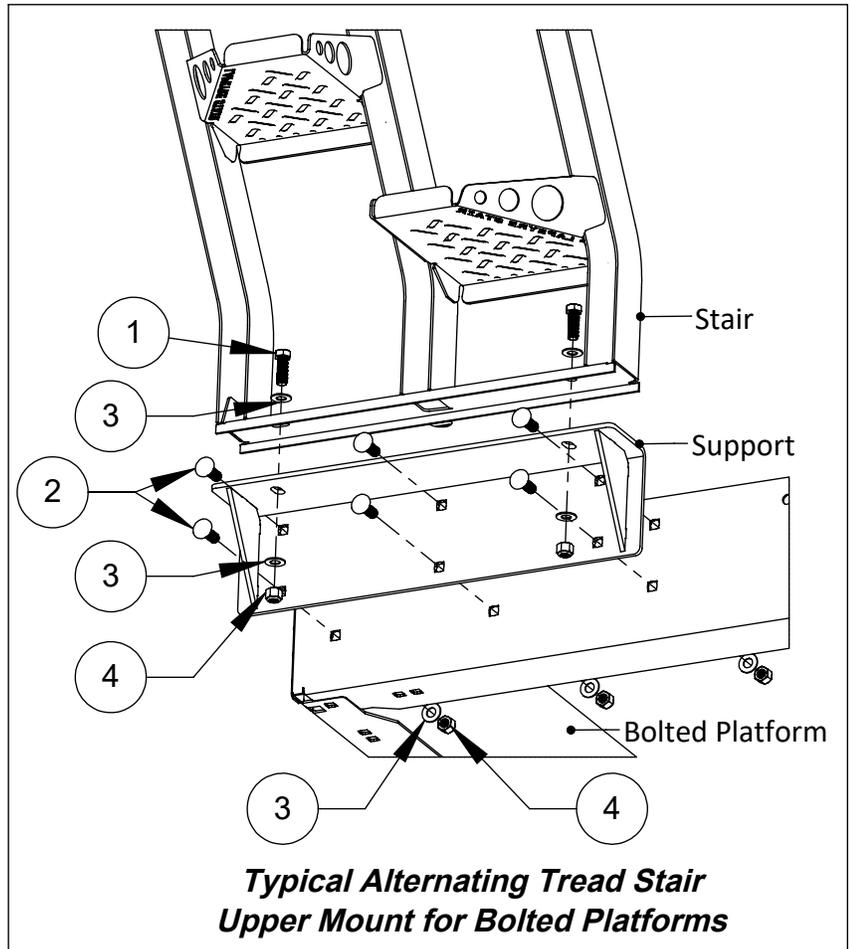

**Typical Alternating Tread Stair
Upper Mount for Bolted Platforms**

| ITEM | KIT # | DESCRIPTION |
|------|-------|--------------------------------|
| 1 | 3 | 1/2"-13 X 1-1/2" Hex Bolt |
| 2 | 4 | 1/2"-13 X 1-1/2" Carriage Bolt |
| 3 | 3 & 4 | 1/2" Flat Washer |
| 4 | 3 & 4 | 1/2"-13 Lock Nut |

REVISED 09/03/2025

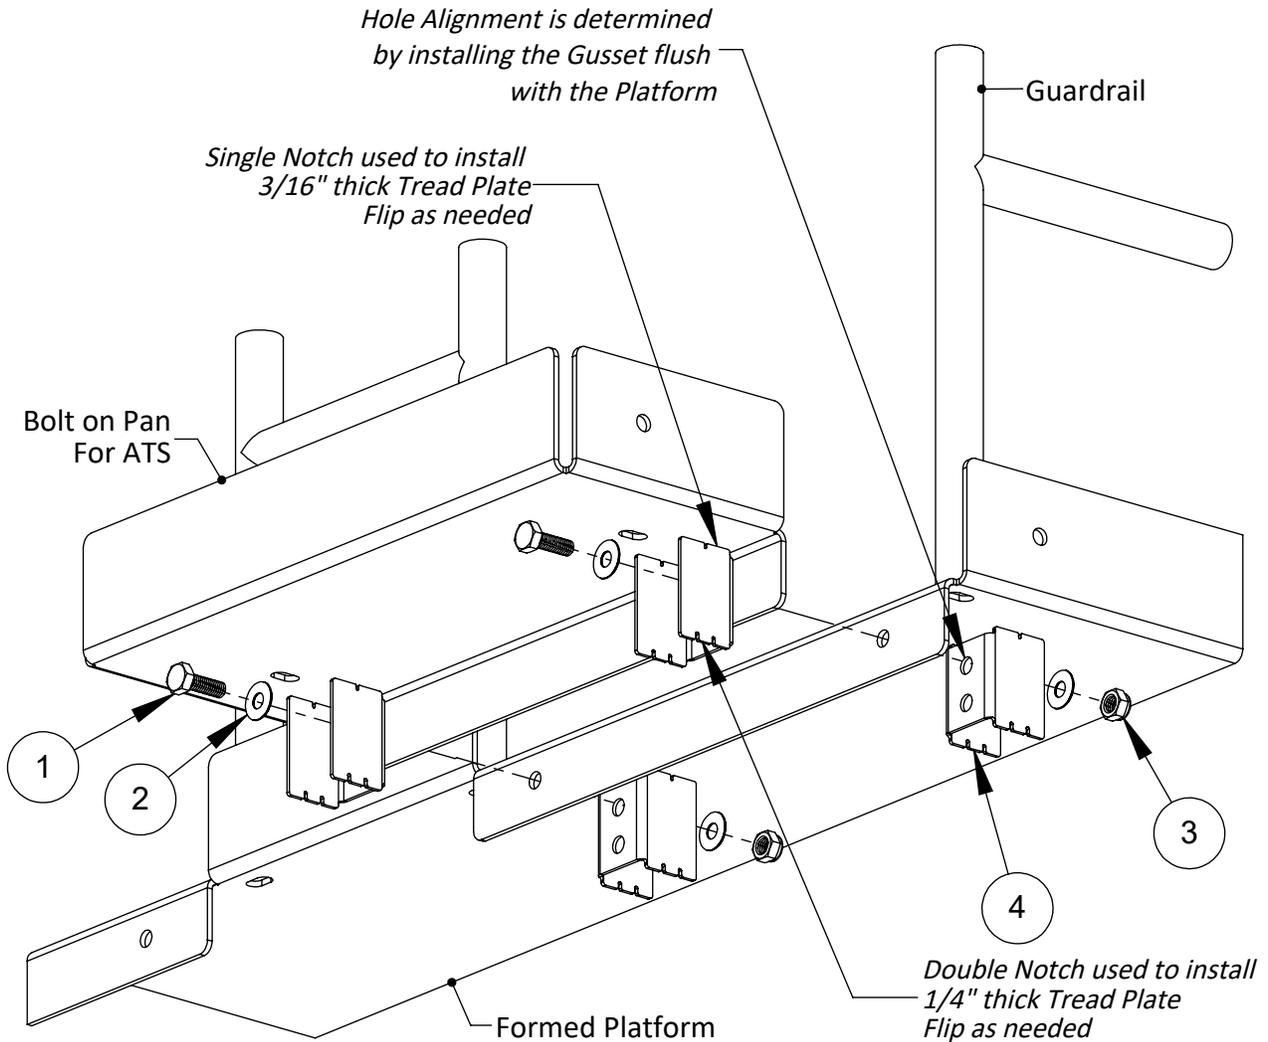

* Supplied but not included in Hardware KIT

| ITEM | KIT # | DESCRIPTION |
|------|-------|---------------------------|
| 1 | 3 | 1/2"-13 X 1-1/2" Hex Bolt |
| 2 | 3 | 1/2" Flat Washer |
| 3 | 3 | 1/2"-13 Lock Nut |
| 4 | * | Gusset, Pan Support |

REVISED 04/09/2025